 <b>Global Standard</b>	<b>LESER Global Standard</b> Standardisation of Worldwide Warehouse Lapping by Hand	LGS 4437
		Page 1/4

## Content

<b>1 Purpose .....</b>	<b>1</b>
<b>2 Scope .....</b>	<b>1</b>
<b>3 References .....</b>	<b>1</b>
<b>4 Introduction .....</b>	<b>1</b>
<b>5 Re-lapping seat and disc sealing surfaces .....</b>	<b>2</b>
<b>6 Re-lapping the nozzle and the disc .....</b>	<b>4</b>

### 1 Purpose

This LESER Global (LGS) provides instructions on re-lapping LESER safety valves. The work steps and materials are given.

### 2 Scope

This LGS applies to all members of the LESER quality cluster as defined in the global quality management manual.

### 3 References

LGS 4456

### 4 Introduction

#### 4.1 Tools and materials

Tools/material	Order number	LWN
Monocrystalline diamond powder	599.0102.0000	LGS 4456-D Tool-Kit Standard
Oleic acid	Still in progress	
Lapping stamp	See Standard Tool-Kit	LGS 4456-D Tool-Kit Standard
Lapping paste	See Standard Tool-Kit	LGS 4456-D Tool-Kit Standard
Glass plate	828.0000.0016	LGS 4456-D Tool-Kit Standard

disclosure cat.:	II	proofread:	Kuw	published date:	8/31/11	effect. date:	10/11
author:	Kro	released by:	KUW	replaces:	369-37	status:	published
resp. depart.:	PP	date of release:	9/15/11	revision No.:	0		
doc. type:	LGS	change rep. No.:	00882A	retention period:	10y.		

protected

## 5 Re-lapping seat and disc sealing surfaces

### a) Lapping with the lapping stamp.



- The lapping stamp is for larger damage on the seat sealing surface.
- Lapping paste and oleic acid must be applied to the lapping stamp. Select the lapping paste yourself depending on the degree of damage.
- The greater the damage, the coarser the lapping paste that is to be used.

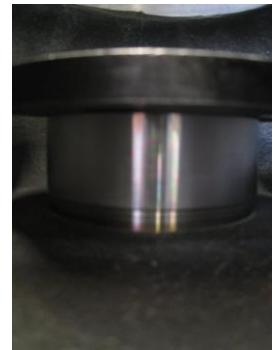


Fig. 1 Lapping with the lapping stamp.

### b) Wet the disc with the monocrystalline diamond powder and the oleic acid.



- Four small points on the sealing surface of the disc must be used. Monocrystalline diamond powder is applied to 2 points and oleic acid to the other 2 points.



Fig. 2 Wetting the disc

### c) The seat and disc are re-lapped together.



- The seat and disc are lapped together so that better surface evenness of the disc is achieved.
- Lapping is performed by slight circular hand movements.



Fig. 3 Lapping the seat and disc

protected

disclosure cat.:	II	proofread:	Kuw	published date:	8/31/11	effect. date:	10/11
author:	Kro	released by:	KUW	replaces:	369-37	status:	published
resp. depart.:	PP	date of release:	9/15/11	revision No.:	0		
doc. type:	LGS	change rep. No.:	00882A	retention period:	10y.		

## d) Re-lapping with a glass plate



- Re-lapping the seat with a glass plate results in greater surface evenness.



Fig. 3 Re-lapping with a glass plate

protected

disclosure cat.:	II	proofread:	Kuw	published date:	8/31/11	effect. date:	10/11
author:	Kro	released by:	KUW	replaces:	369-37	status:	published
resp. depart.:	PP	date of release:	9/15/11	revision No.:	0		
doc. type:	LGS	change rep. No.:	00882A	retention period:	10y.		

## 6 Re-lapping the nozzle and the disc

a) Re-lapping of the nozzle and the disc is performed separately on a glass plate.



- Mix the monocrystalline diamond powder together with the oleic acid on the glass plate and then lap the nozzle and the disc.
- Lapping is performed by slight circular hand movements.



protected

Fig. 5 Re-lapping the nozzle and the disc

disclosure cat.:	II	proofread:	Kuw	published date:	8/31/11	effect. date:	10/11
author:	Kro	released by:	KUW	replaces:	369-37	status:	published
resp. depart.:	PP	date of release:	9/15/11	revision No.:	0		
doc. type:	LGS	change rep. No.:	00882A	retention period:	10y.		